## **ULTRA VIOLET RADIOMETER**

# MODEL **UV202 USER HANDBOOK**



Handbook Ref No. MH088/Issue F File Ref: UV202f.doc



## **ULTRA VIOLET RADIOMETER**

MODEL UV202

**USER HANDBOOK** 

**CONTENTS**: 1. Introduction

- 2. Specification
- 3. Operation
- 4. Care and Maintenance
- 5. Environmental care, recycling and disposal

### 1. INTRODUCTION

The portable UV radiometer model UV202 is a versatile direct reading instrument designed specifically for measuring UV irradiance. The radiometer comprises of a micro-processor controlled display unit with sensor select switch each with five programmable calibration factors and a detector head with a UVA\* and UVB3\* sensors.

This instrument is especially useful for monitoring the ultra-violet emissions from high and low pressure mercury vapour lamps, metal halide lamps and ultra violet fluorescent lamps where each sensor can be calibrated to suit the light source.

<sup>\*</sup> Refer to Figures 1 & 2 for spectral response.

## 2. SPECIFICATION

**DISPLAY UNIT** 

Ranges: UVA\*: 0 to 199.99 mW/cm<sup>2</sup>

Resolution 0.01 mW/cm<sup>2</sup>

UVB3\*: 0 to 19.999 mW/cm<sup>2</sup> Resolution 0,001 mW/cm<sup>2</sup>

Overload Indicator Display shows - 0 L - .

Overload: If the irradiance exceeds the above ranges or

the zero offset limit of ~7.5 or 0.75 then the overload message will appear on the display.

Accuracy: Measurement accuracy ±1 digit with a linearity

error of <1% from 1 to 199.99 mW/cm2 UVA

(19.999 mW/cm2 UVB3).

Absolute calibration accuracy ±7.5% traceable to NPL standards at peak response or calibration

wavelength.

Front Panel Controls:

D Power on / off button

ZERO Sets zero value, zero offsets are subtracted

from subsequent measurements.

HOLD/RUN Display is held at present reading until HOLD

button is pressed again.

DETECTOR Select between the UVA and UVB3 detectors.

LAMP Select between 1 of 5 lamp types each with

its own calibration factor.

Connectors: 6 pin mini DIN detector connector.

2.1mm pwr calibration enable connector.

Display: 4½ digit lcd display. Character height 12.7mm.

Power supply: Internal 9 volt battery


Temperature range: 0 to 40 °C. 80% RH.

Dimensions:  $150 \times 80 \times 45 \text{mm}$ .

High impact polystyrene.

Weight: 320g

## 2. SPECIFICATION (continued):

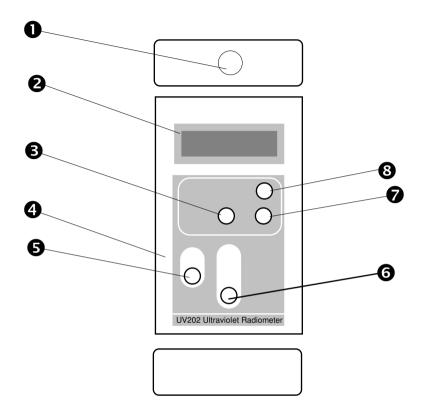

- Detector connector
- 2 4½ digit LCD display
- Background ZERO button
- Battery compartment
- **6** Detector select button
- 6 Lamp type calibration select button
- Display HOLD button
- 8 Power switch button

## 2. SPECIFICATION (continued):

#### **DETECTOR ASSEMBLY**

Detector assembly: Black anodised aluminium alloy sensor

housings with 1.5 metre interconnecting cable.

Response: UVA sensor: ref. Figure 1

UVB sensor: ref. Figure 2.

Linearity error: <1% from 0.01mW/cm<sup>2</sup> - 200 mW/cm<sup>2</sup> (UVA)

<1% from 0.001 mW/cm<sup>2</sup> - 20 mW/cm<sup>2</sup> (UVB)

Temperature coefficient: 0 to +0.1 %/℃

Temperature range: Operation: -10 to +60 ℃

Storage: -20 to +70 °C

Dimensions: 56mm \( \phi \) x 30mm high

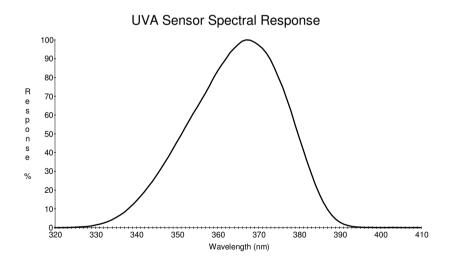


Figure 1

## 2. SPECIFICATION (continued):

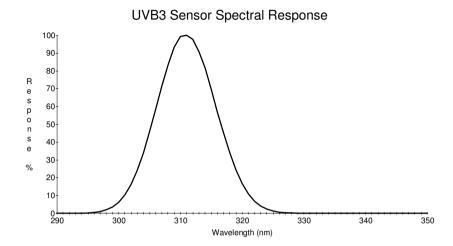


Figure 2

UVA & UVB3 Sensors

Filter	Peak	FWHM
UVA Cos	367 ±2nm	29 ±2nm
UVB3 Cos	311 ±2nm	12 ±2nm

## 3. OPERATION

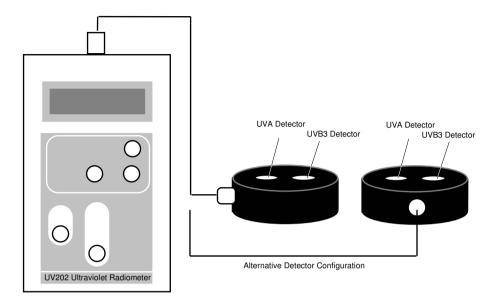


Figure 3

- 1) With the unit OFF, plug the detector mini DIN connector into the socket on the top of the display unit.
- 2) Place the detector under the light source, taking the necessary precautions to protect your-self from the ultra-violet radiation.
- 3) Switch radiometer power on and select UVA or UVB3 as required.
- 4) Select the LAMP calibration to match the lamp being measured.
- 5) Cover the detector with the blanking plate and activate the ZERO button. Note if the sensors are not covered when the ZERO button is pressed and the signal exceeds ~ 7.5 or 0.75 then the overload message will appear on the display, OL-.
- 6) Remove the blanking plate, the meter will now display the ultra-violet irradiance in units of mW/cm<sup>2</sup>.
- 7) To stop measurements and hold the display at the last reading press HOLD button.
- 8) To change from UVA to UVB or visa versa press DETECTOR button.

## 3. OPERATION (continued):

### **BATTERY REPLACEMENT**

- 1) Switch off radiometer before replacing the battery.
- 2) Carefully slide the battery compartment down and then lift open.
- 3) Remove and unclasp the old battery.
- 4) Only replace with a 9 volt, PP3 size battery.

Irradian Limited UV202 Radiometer

## 4. CARE AND MAINTENANCE

1) The UV202 display unit can be cleaned using a moist cloth with detergent. Do not use solvent or alcohol to clean surfaces.

- 2) The diffusers on the detector head should be kept clean at all times with a small amount of alcohol.
- 3) The radiometer is a precision instrument, protect from shocks.
- 4) Avoid hanging the detector assembly by its cable.

# 5. ENVIRONMENTAL CARE, RECYCLING AND DISPOSAI

The purpose of the European Commission WEEE directive (Waste Electrical and Electronic Equipment; 2002/96/EC) is to ensure that electrical and electronic products are recycled using the best treatments, recovery and recycling techniques that are currently available. This is so that high health standards and a lasting environmental protection can be achieved and maintained.

This product has been designed and manufactured using high quality materials and components, many of which can be recycled and reused.

Please remember to observe the local regulations that govern both the disposal of the packaging materials accompanying this product and any used batteries.




# DO NOT DISPOSE OF THIS PRODUCT IN YOUR GENERAL WASTE BIN.

Please inform yourself about your local WEEE collection system which is available for electrical and electronic products that are marked with the symbol shown here.

When disposing of this meter, please use one of the following options:

- 1. Use your local designated WEEE collection facilities to dispose of the complete product (including cables, detectors, filters & accessories).
- 2. Return the complete product back to Irradian, marking it clearly as intended for WEEE disposal.

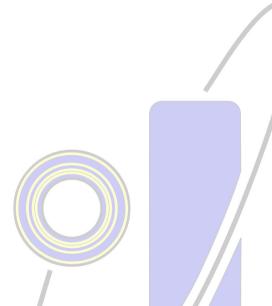

## **IRRADIAN** Ltd.

9 Elphinstone Road Tranent East Lothian Scotland EH33 2LG Telephone: +44 (0)1875 898-083 Facsimile: +44 (0)1875 616-528 E-mail: info@irradian.co.uk

Web: www.irradian.co.uk